

Anziehvorschrift für Zylinderkopf		069.330 passend für / suitable for adaptable à / adaptable a Daihatsu	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
⑦⑤②④⑩ ⑨③①⑥⑧				
Anziehen/ * 19-27 Nm Tightening/ 39-47 Nm Serrage/ 59-67 Nm Apriete				
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 77,0 mm; $\frac{1}{2}$: 1,35 mm				
Mot: HD, HDC, HD-E, HDEP, HEE, HEEG, HE-EJ				
1,3 ltr.-1,6 ltr. 61-77 kW (83-105 PS)				
Applause I-II, Charade IV, Feroza, GranMove, Terios				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*069.330*		