

Anziehvorschrift für Zylinderkopf		002.141		Das Original
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a		GM
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
15 12 8 4 2 6 10 13 11 7 3 1 5 9 14				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	1-12 1-12 14-15 14-15 13 13	30 Nm 155° 7 Nm 60° 7 Nm 120°	
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*002.141*	