

Anziehvorschrift für Zylinderkopf			026.500 passend für / suitable for adaptable à / adaptable a Subaru	 Das Original
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
⑤ ① ③ ⑦ ⑧ ④ ② ⑥				
Anziehen/ Tightening/ Serrage/ Apriete	✱ ☐	Justy 39 Nm 73 Nm 70-77 Nm	✱ ★ ●	Libero Bus 35-45 Nm 65-73 Nm 15 min 180 min 64-73 Nm
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 79,5mm; $\frac{1}{2}$: 1,42mm				
Mot: EF12				
1,2 ltr. 38-55 kW (52-75 PS)				
Justy I, Libero Bus				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*026.500*	