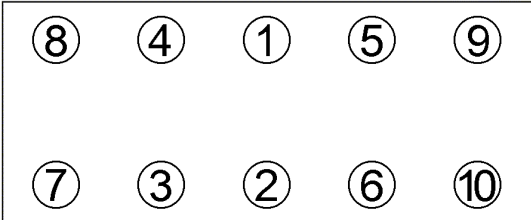


Anziehvorschrift für Zylinderkopf		147.011 passend für / suitable for adaptable à / adaptable a PSA	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 758.260 M 12 x 150			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	20 Nm 60 Nm 90° 90°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 86 mm; $\frac{1}{8}$: 1,57 mm;			
Mot: XUD11ATE, XUD11BTE, P8A, P8C, PHZ, PJZ			
2,1 Ltr. Diesel 12V; 80 KW (110 PS)			
Evasion, Xantia, XM, Ulysse, Zeta, 406, 605, 806			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*147.011*	