

Anziehvorschrift für Zylinderkopf		158.382	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		OPEL		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A  B 		⑧ ④ ① ⑤ ⑨ ⑦ ③ ② ⑥ ⑩		
Anziehen/ Tightening/ Serrage/ Apriete * ➤ ➤ 25 Nm 50 Nm 90° 90°				
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
1,7 Ltr. Diesel 1,00 mm / 2 Löcher				
Mot. Z17DT, A17DT, Z17DTR, A17DTR, A17DTC, A17DTS, A17DTJ				
Astra H, Astra J, Corsa D, Meriva A, Meriva B, Zafira B				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*158.382*		