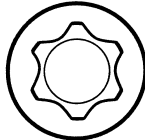


Anziehvorschrift für Zylinderkopf		191.530	 Das Original																				
Tightening Instructions for Cylinder Head		passend für / suitable for																					
Instructions de serrage pour culasse		adaptable à / adaptable a																					
Prescripciones de apriete para culatas		BMW																					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete																					
	<table><tr><td>⑧</td><td>⑥</td><td>②</td><td>④</td><td>⑩</td></tr><tr><td>⑨</td><td>③</td><td>①</td><td>⑤</td><td>⑦</td></tr><tr><td>⑨</td><td>③</td><td>①</td><td>⑤</td><td>⑦</td></tr><tr><td>⑧</td><td>⑥</td><td>②</td><td>④</td><td>⑩</td></tr></table>			⑧	⑥	②	④	⑩	⑨	③	①	⑤	⑦	⑨	③	①	⑤	⑦	⑧	⑥	②	④	⑩
	⑧	⑥	②	④	⑩																		
	⑨	③	①	⑤	⑦																		
	⑨	③	①	⑤	⑦																		
⑧	⑥	②	④	⑩																			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	30 Nm 90° 90°																					
Zeichenerklärung / Explanations / Explication / Explicacion																							
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro																			
Motortyp / Engine type / Type de moteur / Tipo de motor																							
Mot. N62 B36																							
E65 735i																							
E66 735Li																							
± 1,05mm (+0,3)																							
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*191.530*																					