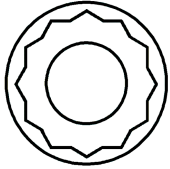


Anziehvorschrift für Zylinderkopf		286.750 passend für / suitable for adaptable à / adaptable a Toyota	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo
 

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

7	3	1	6	10
9	5	2	4	8

Anziehen/	★	50 Nm
Tightening/	➤	90°
Serrage/	➤	90°
Apriete	➤	90°
	☐	90° lösen / loosen
	☐	90° lösen / loosen
	➤	90°
	➤	90°
	➤	90°

Zeichenerklärung / Explanations / Explication / Explicacion

★	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

 Ø: 87 mm / 1,05 mm
 2,0 / 2,2 Ltr.

 Mot.: 1AD-FTV, 2AD-FHV, 2AD-FTV
 91-130 KW (124-177 PS)

 Auris, Avensis, Corolla, RAV 4

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*286.750*
--	------------------