

Anziehvorschrift für Zylinderkopf		298.640	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Toyota		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A B		8 4 2 5 9 10 6 1 3 7		
590.400				
M 10x147x1,5				
Anziehen/ Tightening/ Serrage/ Apriete ✱ ➤ ➤ M10: 25 Nm M10: 49 Nm M10: 90° M10: 45°				
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✱: 0,70 mm				
Mot.: 1ZR-FE / 1,6 Ltr. 16V				
82-97 KW (112-132 PS)				
Auris, Altis, Corolla, Vios, Yaris				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*298.640*	