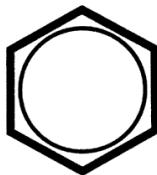
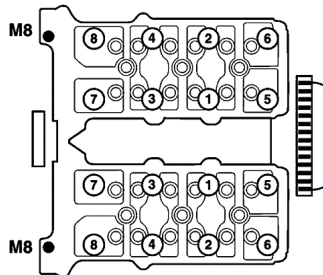


Anziehvorschrift für Zylinderkopf		374.906 passend für / suitable for adaptable à / adaptable a FORD USA	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 755.570 M11 x 1,5 x 131,5 A6K 20145				
Anziehen/ Tightening/ Serrage/ Apriete		*	20Nm / 14,7 lbft 35Nm / 25,8 lbft ➤ 90° ➤ 90° ➤ 90°	M8: 11Nm / 8 lbft
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor V6 227cid 3.7l DOHC 24V / RH ☐Ø: 97,3mm ⚙: 0,89mm				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*374.906*	