

Anziehvorschrift für Zylinderkopf		383.320		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
⑥ ④ ② ⑦ ⑧ ① ③ ⑤				
Anziehen/ Tightening/ Serrage/ Apriete		40 Nm 60 Nm ➤ 90° ➤ 90° ➤ 90° ➤ 90° ➤ 90° lösen/slacken		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
1,2 Ltr. TDI 45 kW (61 PS) Mot. ANY, AYZ				
✱ 1,6l mm 3 Löcher				
A2 2000 - 2005 Lupo 1999 - 2006				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*383.320*	