

Anziehvorschrift für Zylinderkopf		389.430 passend für / suitable for adaptable à / adaptable a Fiat/Iveco	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
⑧④①⑤⑨ ⑦③②⑥⑩				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤ ➤	50 Nm Pos. 1 - 6 100 Nm Pos. 1 - 6 90° Pos. 7 - 10 60° Pos. 1 - 6 90° Pos. 7 - 10 60°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
÷ 1,10 mm				
Ducato 11, Ducato 15, Ducato Maxi		04.2002>		
Daily 29 L 10, 35 C/S 10, 50 C 12		05.2002>		
Mot. F1AE0481, F1AE0481C				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*389.430*		