

Anziehvorschrift für Zylinderkopf		330.610 passend für / suitable for adaptable à / adaptable a Nissan	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A  B 		⑥ ④ ② ⑦ ⑧ ① ③ ⑤		
Anziehen/ Tightening/ Serrage/ Apriete ✱ ➤ ☐ ➤ 40 Nm 40 Nm 60° 40 Nm 75°				
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 78,5 mm 1/4: 0,40 mm				
Mot: HR12DE 1,2 ltr. 12V				
Micra IV (K13) 05/2010➔				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*330.610*	