

Anziehvorschrift für Zylinderkopf		468.920 passend für / suitable for adaptable à / adaptable a Mitsubishi / Fiat	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A  B 		⑧ ⑥ ① ③ ⑨ ⑩ ④ ② ⑤ ⑦		
Anziehen/ Tightening/ Serrage/ Apriete		* 50±2 Nm ➤ 90° ➤ 90° loosen 50±2 Nm ➤ 90° ➤ 90° ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 87,5 mm / 11/16": 1,30 mm / Mark A				
Engine: 4N15 2.4L Diesel				
Mitsubishi L200, Pajero Sport II Fiat Fullback				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*468.920*	