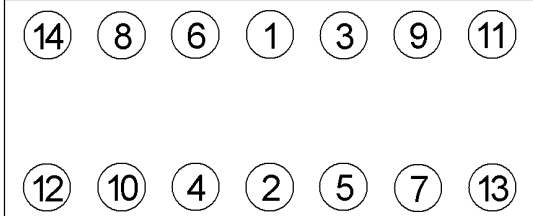


Anziehvorschrift für Zylinderkopf			477.310		 Das Original
Tightening Instructions for Cylinder Head			passend für / suitable for		
Instructions de serrage pour culasse			adaptable à / adaptable a		
Prescripciones de apriete para culatas			BMW		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
					
Anziehen/ Tightening/ Serrage/ Apriete	* □ ➤ ➤	70 Nm 180° 50 Nm 120° 120°			
Zeichenerklärung / Explanations / Explication / Explicacion					
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
Mot. N57 D30 1,45mm Ø84,7mm					
E90/E91/E92/93 325d, 330d,xd					
F07GT/F10 525d, 530d,xd, 535d					
F01/F02 730d,Ld, 740d					
E70 X5 30dX, 40dX					
E71 X6 30dX, 40dX					
1 Loch, Hole, Trou, Agujero, Fori					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*477.310*		