

Anziehvorschrift für Zylinderkopf		415.690 passend für / suitable for adaptable à / adaptable a Mitsubishi	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A  B 		8 6 1 3 9 10 4 2 5 7		
Anziehen/ Tightening/ Serrage/ Apriete * 15 Nm 35 Nm +/- 2 Nm ➤ 90° ➤ 90°				
Zeichenerklärung / Explanations / Explication / Explicacion				
✱ ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 87 mm; $\frac{1}{16}$: 0,5 mm				
Mot.: 4B10 / 4B11				
ASX, Lancer, Outlander				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*415.690*		