

Anziehvorschrift für Zylinderkopf		423.560	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a	
Instructions de serrage pour culasse		Nissan	
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
11 13 14 12 9 7 3 5 1 2 6 4 8 10 15			
Anziehen/ Tightening/ Serrage/ Apriete		* POS. 1 - 10 29 Nm 64 Nm 29 Nm 59 - 69 Nm	* POS. 11 - 15 6,8 - 8 Nm
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylindr head bolts warm up time (80°C) loosen and tightn each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
75 mm Ø			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*423.560*	