

Anziehvorschrift für Zylinderkopf		540.460 passend für / suitable for adaptable à / adaptable a Mitsubishi	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
⑨ ③ ① ⑥ ⑧ ⑦ ⑤ ② ④ ⑩				
Anziehen/ Tightening/ Serrage/ Apriete ✱ ☐ ➤ ➤ 90 Nm 40 Nm 90° 90°				
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
LancerV 2,0D 06.92- 50 KW Space Wagon 2,0TD GLX 10.92 -10.98 60 KW Space Runner 2,0TD GLX 10.92 -08.99 60 KW GalantV 2,0 GLSTD 11.92 -08.96 66 KW LancerV 2,0 GLX D 12.92-10.03 50 KW GalantVI 2,0 TDI 09.96 -10.04 66 KW MC 4D68, 4D68T				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*540.460*	