

Anziehvorschrift für Zylinderkopf
Tightening Instructions for Cylinder Head
Instructions de serrage pour culasse
Prescripciones de apriete para culatas

563.930

passend für / suitable for
adaptable à / adaptable a


 
Nissan



Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

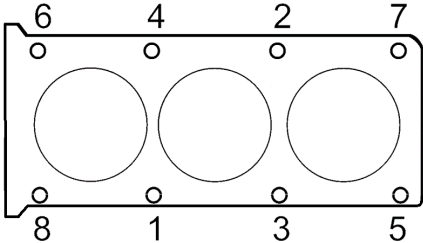

- Anziehen/
Tightening/
Serrage/
Apriete
- * 40 Nm
 - 80°
 - 360°
 - 40 Nm
 - 90°
 - 90°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø 78mm

Mot.: HR12DDR
1,2 ltr.

ElingKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

563.930