

Anziehvorschrift für Zylinderkopf		589.490 passend für / suitable for adaptable à / adaptable a Toyota / PSA	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
10 11 5 1 4 8 9 6 2 3 7				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	1-11: 10 Nm 1-10: 30 Nm 11: 20 Nm 1-8: 230° 9-10: 180°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
1,0 Ltr. VVT-i				
Mot. 1KR-FE				
05.2014 ➔				
Aygo 05/2014 ➔				
Yaris 07/2014 ➔				
Peugeot 108, Citroen C1				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*589.490*	