

Anziehvorschrift für Zylinderkopf		528.200 passend für / suitable for adaptable à / adaptable a Nissan	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
⑦ ③ ① ⑤ ⑨ ⑧ ④ ② ⑥ 10				
Anziehen/ Tightening/ Serrage/ Apriete * 100 Nm ➤ 90° ➤ 90°				
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Serena (C23M) 01.95- Vanette Cargo Bus (HC23) 01.96- Vanette Cargo Kasten (HC23) 01.95- Cabstar E 01.98-10.06 Trade 05.97-12.00 MC LD23 2,3D 55 KW Thickness 1.30 mm				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*528.200*	