

Anziehvorschrift für Zylinderkopf		535.650	 Das Original																				
Tightening Instructions for Cylinder Head																							
Instructions de serrage pour culasse																							
Prescripciones de apriete para culatas																							
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete																					
	<table border="1"><tr><td>9</td><td>5</td><td>1</td><td>4</td><td>8</td></tr><tr><td>10</td><td>6</td><td>2</td><td>3</td><td>7</td></tr><tr><td>10</td><td>6</td><td>2</td><td>3</td><td>7</td></tr><tr><td>9</td><td>5</td><td>1</td><td>4</td><td>8</td></tr></table>			9	5	1	4	8	10	6	2	3	7	10	6	2	3	7	9	5	1	4	8
9	5	1	4	8																			
10	6	2	3	7																			
10	6	2	3	7																			
9	5	1	4	8																			
Anziehen/ Tightening/ Serrage/ Apriete	* M11 20 Nm 40 Nm ➤ 90° ➤ 90°	M8 15Nm ➤ 90°																					
Zeichenerklärung / Explanations / Explication / Explicacion																							
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos																			
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)																			
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo																			
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera																			
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro																			
Motortyp / Engine type / Type de moteur / Tipo de motor																							
Ø 93,4 mm, 1,1 mm																							
Mot: M 273.923																							
S 450 W221 GL 450 X164																							
links, left, gauche, izquierda																							
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*535.650*																				