

Anziehvorschrift für Zylinderkopf		758.338 passend für / suitable for adaptable à / adaptable a Volvo	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
221.530 M 12 x 157		12 8 4 1 5 9 13 11 7 3 2 6 10 14		
Anziehen/ Tightening/ Serrage/ Apriete		* 20 Nm 60 Nm ▶ 130°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
▶	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Mot. B 6304 FS/GS 6 Cyl., 3,0 Ltr. 960 1991→ S80 →1999				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*758.338*	