

Anziehvorschrift für Zylinderkopf		780.910		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas		Mitsubishi / PSA			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
A B		⑧ ⑥ ① ③ ⑨ ⑩ ④ ② ⑤ ⑦			
Anziehen/ Tightening/ Serrage/ Apriete		* 15 Nm 35 Nm ➤ 90° ➤ 90°			
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
Ø: 89,0 mm / ⌀: 0,6 mm					
Mot.: 4B12 2.4 Ltr. 16V					
ASX, Delica, Lancer, RVR, Outlander Citroen C-Crosser					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*780.910*		