

Anziehvorschrift für Zylinderkopf		787.500		
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Ford	Das Original	
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete				
← FRONT ⑨ ⑤ ① ③ ⑦ ⑧ ④ ② ⑥ ⑩				
Anziehen/ Tightening/ Serrage/ Apriete				
* 1974-1993 60 ft-lbs 90 ft-lbs * 1993-1997 50 ft-lbs 50 ft-lbs ➤ 100°				
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*787.500*	