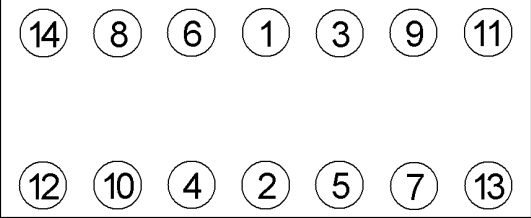


Anziehvorschrift für Zylinderkopf		713.183		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a		
		BMW		
233.380 M 12x1,5x200		Das Original		
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete				
				
Anziehen/ Tightening/ Serrage/ Apriete	* □ ► ►	70 Nm 180° 50 Nm 120° 120°		
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
►	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Mot. N57N/Z D30 1,65mm				
F30 330d				
F07/F10/F11 530d,dX, 535d,dX				
F06/F12/F13 640d,dX				
F01/F02 730d,dX, 740d,dX/ 730Ld				
F25 X3 30dX, 35dX				
3 Löcher, holes, noches				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*713.183*		