

Anziehvorschrift für Zylinderkopf		833.390 passend für / suitable for adaptable à / adaptable a Ford	 Das Original			
Tightening Instructions for Cylinder Head						
Instructions de serrage pour culasse						
Prescripciones de apriete para culatas						
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo						
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete						
7 3 1 5 8 4 2 6						
<table border="0" style="width: 100%;"> <tr> <td style="width: 10%;">Anziehen/ Tightening/ Serrage/ Apriete</td> <td style="width: 10%;"> * ➤ ➤ ➤ </td> <td style="width: 80%;"> 20 Nm 35 Nm 90° 90° 45° </td> </tr> </table>				Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	20 Nm 35 Nm 90° 90° 45°
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	20 Nm 35 Nm 90° 90° 45°				
Zeichenerklärung / Explanations / Explication / Explicacion						
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos		
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)		
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo		
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera		
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor						
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*833.390*			