 


Anziehvorschrift für Zylinderkopf		834.430		Das Original
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo				
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete				
				
Anziehen/ Tightening/ Serrage/ Apriete				
* 52 ft-lbs □ 77 ft-lbs 77 ft-lbs ➤ 90°				
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ □ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*834.430*	