

Anziehvorschrift für Zylinderkopf		835.555	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Iveco		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
20 12 4 5 13 21 24 16 8 1 9 17 25 23 15 7 2 10 18 26 19 11 3 6 14 22				
Anziehen/ Tightening/ Serrage/ Apriete		* 70 Nm 70 Nm ▶ 180°		
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
▶	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 105,5 mm; $\frac{1}{8}$: 1,59 mm				
Mot: 8060.04/8060.05/8060.24/8060.25 8060.45 5860 ccm 81-167 KW (110-227 PS)				
Iveco EuroCargo;M;Zeta				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*835.555*	