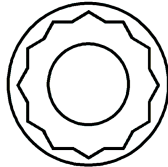
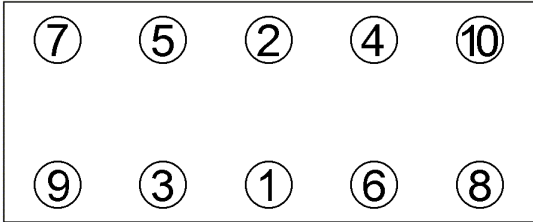


Anziehvorschrift für Zylinderkopf		837.860 passend für / suitable for adaptable à / adaptable a Toyota, Lexus	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
917.570 M11x140/M10x130				
Anziehen/ Tightening/ Serrage/ Apriete	Pos.:1-6: M11x140 mm Pos.:7-10: M10x130 mm * 50 Nm 50 Nm ➤ 90° ➤ 90°	Lange Schrauben Kurze Schrauben		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Mot.: M20A-FKS, M20A-FXS				
Toyota Corolla Lexus UX				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*837.860*		