

Anziehvorschrift für Zylinderkopf		934.020	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a		
Instructions de serrage pour culasse		Lexus / Toyota		
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A  B 		8 4 2 5 9 10 6 1 3 7		
Anziehen/ Tightening/ Serrage/ Apriete * ➤ 36 Nm 36 Nm 90° 90°				
Zeichenerklärung / Explanations / Explication / Explicacion				
	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 91,0 mm / $\frac{3}{8}$: 0,75 mm Mot.: 1AR-FE / 2AR-FE 2.7L - 2.5L EFI Dual-VVT-i Lexus ES2xx/350/300H / RX27/350/450H Toyota Camry / RAV4 /Alphard /Highlander				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*934.020*	