



Installation instruction for the cylinder-head cover 728.180



In addition to the cylinder-head cover including gasket the scope of supply includes a red maintenance tool. The supplied tool is not required for installing the cylinder-head cover.



The maintenance tool is used to unlock the cover of the crankcase ventilation unit (control valve) and is only needed in the event of repairs, e.g. to remove contaminants.

By inserting the maintenance tool underneath the metal clamp, the closure cover can be removed.



ElringKlinger AG | Aftermarket Division

Max-Eyth-Straße 2 | D-72581 Dettingen/Erms

Fon +49 7123 724-799 | Fax +49 7123 724-798

service@elring.de | www.elring.com

SI 03/2023



Das Original