

## CORTECO FITTING INSTRUCTIONS

# OIL SEAL 20034934B

Professional installation of the sealing flange with a PTFE oil seal and sender wheel to the crankcase, flywheel-side.

### REMOVING OR INSTALLING THE FLANGE SEAL MODULE

- ▶ Always follow manufacturer's instruction for the removal or installation process
- ▶ Never use damaged installation tools
- ▶ Carefully check the crankshaft surface for damages or grooves

### HANDLE WITH CARE

- ▶ Do not remove the mounting sleeve from the seal before the installation
- ▶ Do not modify/damage the crankshaft or the sealing flange to adapt them one another
- ▶ Do not use grease or oil
- ▶ Fix the sealing flange with **new bolts tightened at 15 Nm with a torque wrench**
- ▶ **Wait for at least 2 hours** before starting the engine for the PTFE seal lip to settle in the right position

### PROBLEMS IF NOT REMOVED OR INSTALLED PROPERLY

- ▶ Damage to the shaft
- ▶ Oil leakage
- ▶ Engine problems

### FUNCTION OF THE FLANGE SEAL MODULE

- ▶ Detect the crankshaft position and the engine RPM
- ▶ Determine the exact crankshaft position and the correct alignment between the oil seal and the shaft itself

**Don't take a risk – Choose Corteco original quality.**

