



WASHER INSTRUCTIONS

1. The wheel bearing is equipped with the washer

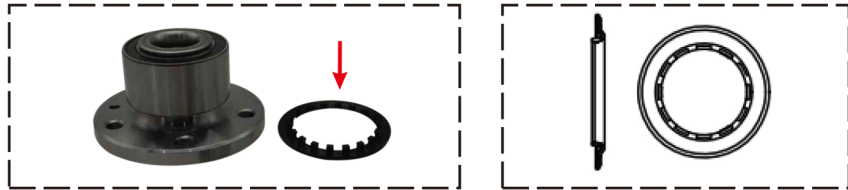

2. How to use the washer

1) The outer joint matching the wheel bearing is equipped with the washer, installation position is shown as follows:

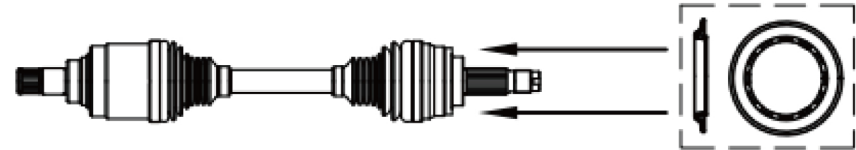

2) We recommend replacing the washer on the outer joint when changing the wheel bearing

- Dismantle the old washer from the outer joint;
- Put the new washer on the outer joint.