


Art. 515.3525

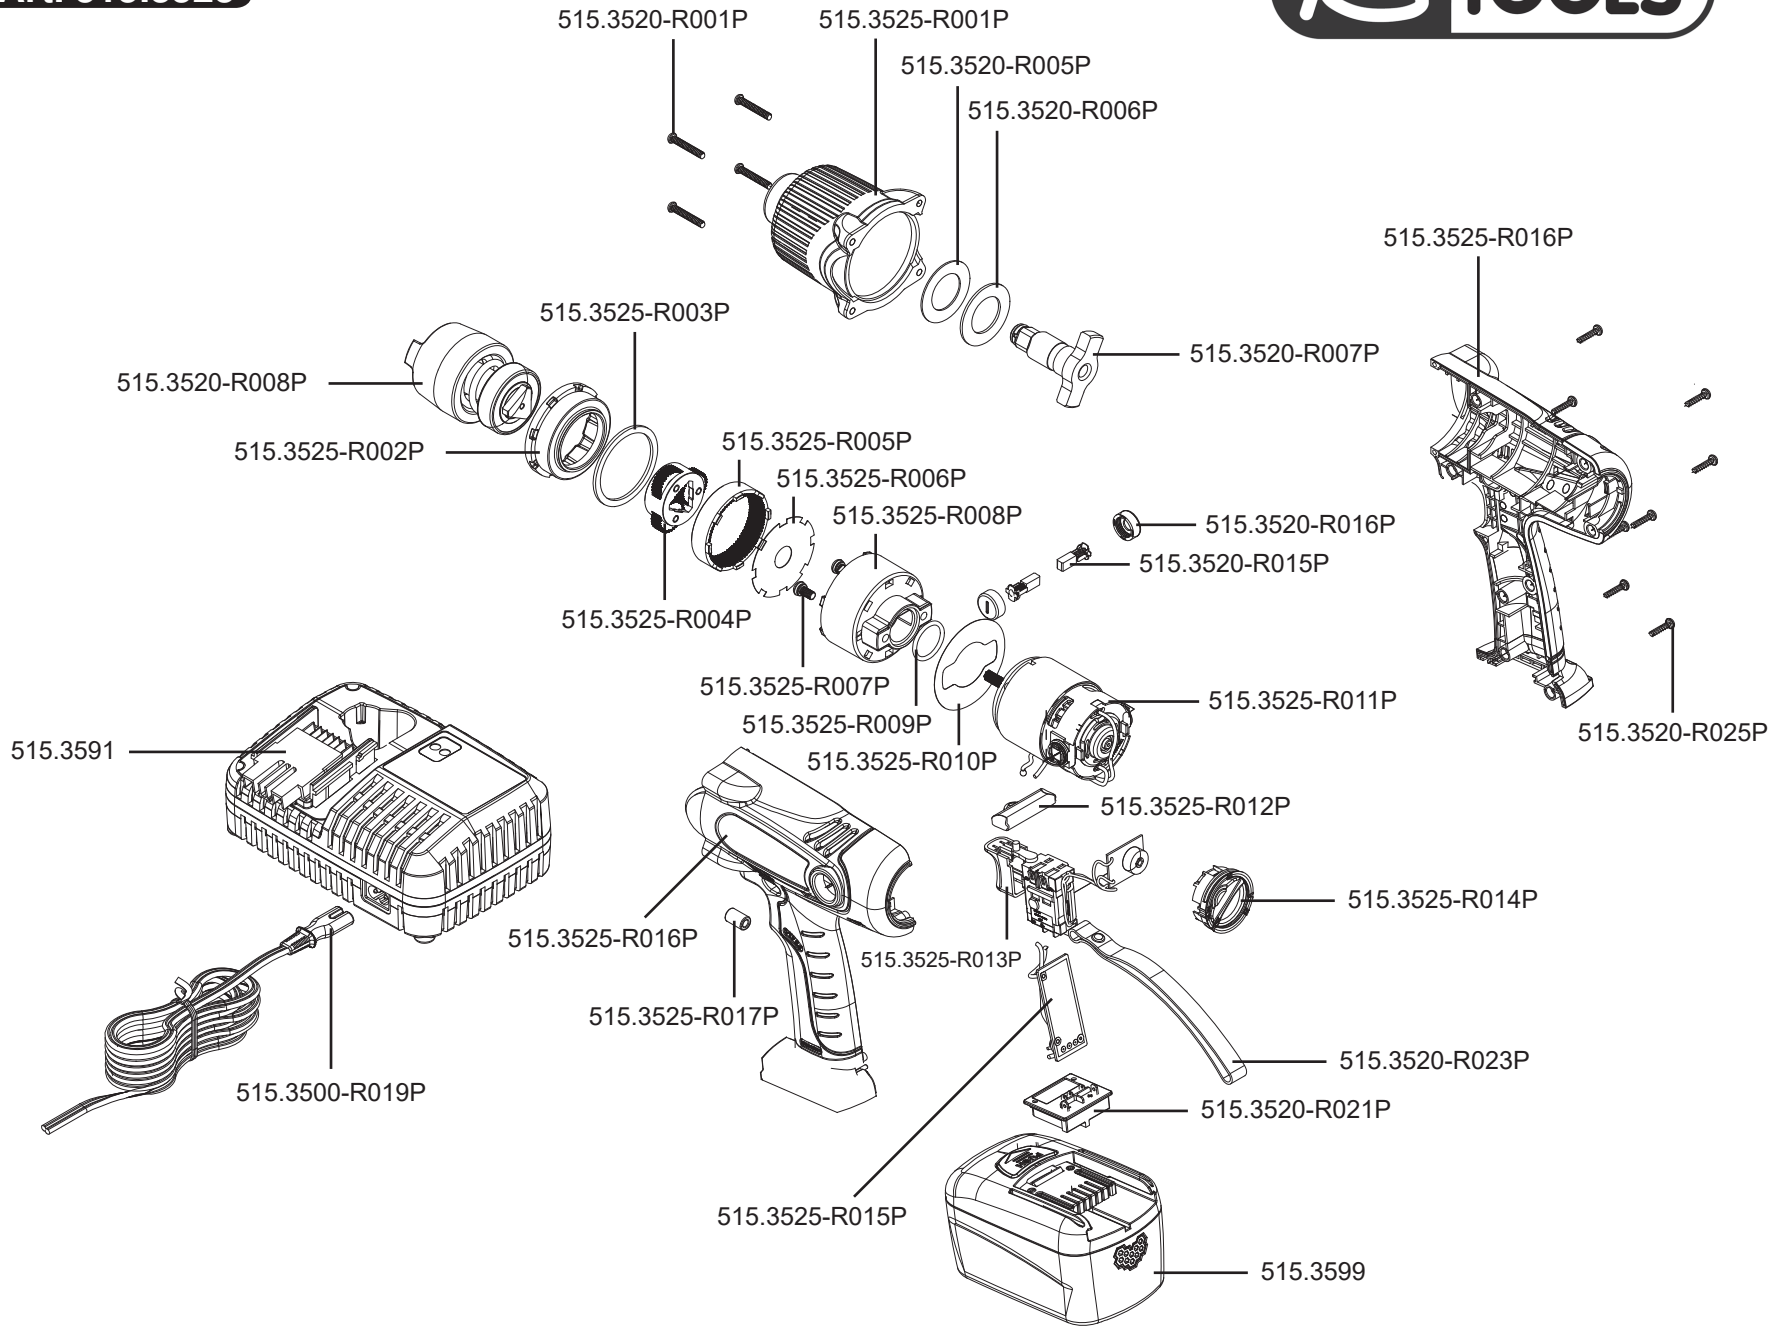

Art. 515.3525

Art.-Nr.	Description	Beschreibung	Menge Qty.
515.3500-R019P	Power cord	Stromkabel	1
515.3520-R001P	Front cover screw	Schraube für Gehäusefront	4
515.3520-R005P	Rubber washer	Gummi Unterlegscheibe	1
515.3520-R006P	Washer	Unterlegscheibe	1
515.3520-R007P	Anvil 1/2"	Amboss 1/2"	1
515.3520-R008P	Impact assy	Schlagwerk	1
515.3520-R015P	Carbon brush	Kohlebürste	2
515.3520-R016P	Carbon brush cover	Abdeckung Kohlebürste	2
515.3520-R021P	Battery connector	Batterieanschluss	1
515.3520-R023P	Loop	Aufhängeschlaufe	1
515.3520-R025P	Housing screw	Gehäuseschraube	8
515.3525-R001P	Front housing	Gehäusefront	1
515.3525-R002P	Bearing plate	Kugellager Aufnahme	1
515.3525-R003P	Rubber washer	Gummidichtung	1

Art.-Nr.	Description	Beschreibung	Menge Qty.
515.3525-R004P	Planetary gear	Planetengetriebe	1
515.3525-R005P	Gear ring	Getriebering	1
515.3525-R006P	Gasket	Dichtung	1
515.3525-R007P	Screw	Schraube	2
515.3525-R008P	Gear box cover	Getriebegehäuse	1
515.3525-R009P	O-Ring	O-Ring	1
515.3525-R010P	Gasket	Dichtung	1
515.3525-R011P	Electric motor	Elektromotor	1
515.3525-R012P	Reverser rod	Umschalthebel	1
515.3525-R013P	Trigger	Abzug	1
515.3525-R014P	Torque adjusting knob	Drehmomentvorwahlschalter	1
515.3525-R015P	Discharge protector	Entladungsschutz	1
515.3525-R016P	Housing left + right	Gehäuse Links + Rechts	1
515.3525-R017P	Ferrite core	Feritkern	1