



INSTALLATION MANUAL

AS-3250

**Arnott New Front Right Air Strut
Jeep Grand Cherokee/WK
(WK2 Chassis, w/Quadra-Lift, w/o Sport)**



Engineered to Ride, Built to Last®

CONGRATULATIONS ON YOUR PURCHASE OF AN ARNOTT® SUSPENSION PRODUCT

WE AT ARNOTT LLC ARE PROUD TO OFFER A HIGH QUALITY PRODUCT WITH ALL THE TECHNICAL SUPPORT YOU NEED. THANK YOU FOR YOUR CONFIDENCE IN US AND OUR PRODUCT.

Proper installation is essential to experience and appreciate the benefits of this system. Please take a moment to review these installation instructions before you begin to install these components on your vehicle. The removal and installation of air suspension products should only be performed by a fully qualified and certified automotive professional.

It is equally important to be aware of all necessary safety measures while installing your new Air Suspension System. This includes proper lifting and immobilizing of the vehicle and isolation of any stored energy to prevent personal injury or property damage.

GENERAL INFORMATION

Reading this manual signifies your agreement to the terms of the general release, waiver of liability, and hold harmless agreement, the full text of which is available at www.arnottinc.com and www.arnotteurope.com.



WARNING:

The air suspension system is under pressure (up to 10 bar, or 150 lbf/in). Verify pressure has been relieved and disconnect power to the air suspension system prior to disassembly. Do not allow dirt or grease to enter the system. Always wear standard hand, ear, and eye protection when servicing the air suspension system.

- Not to be stored below 5°F (-15°C) and above 122°F (50°C).
- Avoid damage to air lines and cables.
- Removal and installation is only to be performed by fully qualified personnel.
- Use car manufacturer's diagnostic software.

CAUTION:

Damage to the vehicle and air suspension system can be incurred if work is carried out in a manner other than specified in the instructions or in a different sequence.

To avoid the possibility of short circuits while working with electric components consult your owner's manual on how to disconnect your battery.

Consult your vehicle owner's manual, service manual, or car dealer for the correct jacking points on your vehicle and for additional care, safety and maintenance instructions. Under no circumstances should any work be completed underneath the vehicle if it is not adequately supported, as serious injuries and death can occur.

For vehicles with a "Closed Air Supply System," replacement of components requires proper adherence to procedures set forth within OE servicing literature. Failure to comply with the OE prescribed procedures can result in component damage and/or failure.

DISCLAIMER:

The product shown in the installation steps below may look different than the part you are installing. The installation steps are the same (unless otherwise noted) and all notices and warnings should be adhered to in the same manner.

AIR STRUT REMOVAL

1. Set steering to straight ahead.
2. Raise vehicle.
3. Remove front wheel. (Figure 1)



FIGURE 1

4. Remove the air line from the air strut. (Figures 2, 3)



FIGURE 2



FIGURE 3

5. Remove the three (3) top mount nuts from the air strut. (Figure 4)

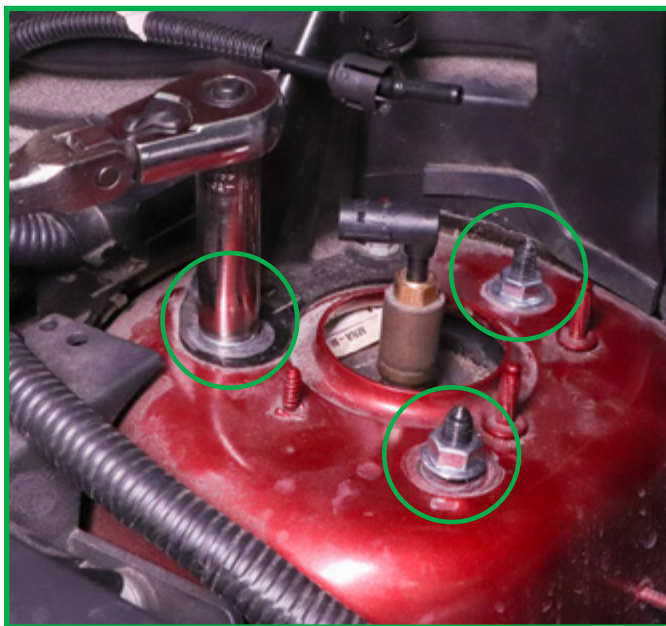


FIGURE 4

6. Remove the speed sensor. (Figures 5, 6)



FIGURE 5



FIGURE 6

7. Clear speed sensor wire from brake line path. (Figure 7)

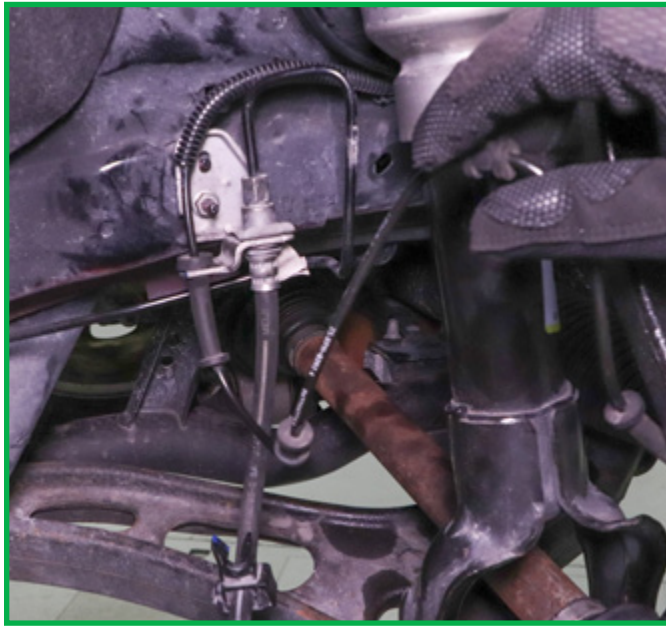


FIGURE 7

8. Remove brake caliper retention clip. (Figure 8)

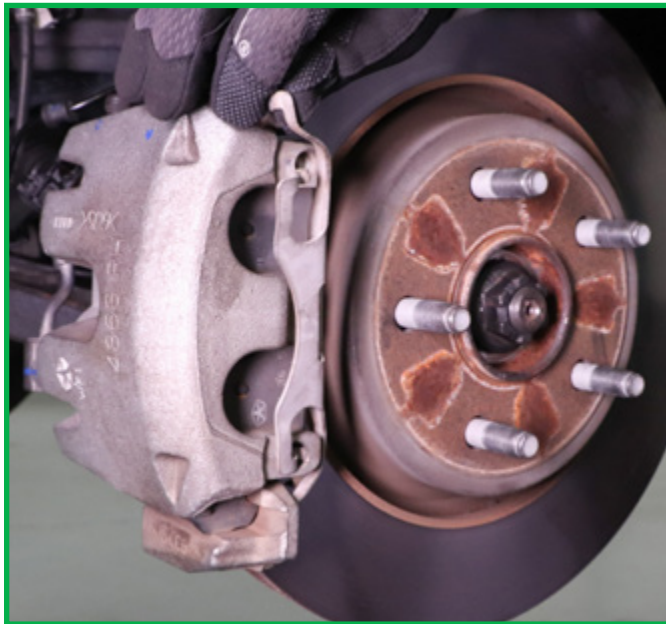


FIGURE 8

9. Remove both (2) brake caliper mounting bolts. (Figures 9, 10)



FIGURE 9



FIGURE 10

10. Secure the brake caliper in a suitable location. (Figure 11)

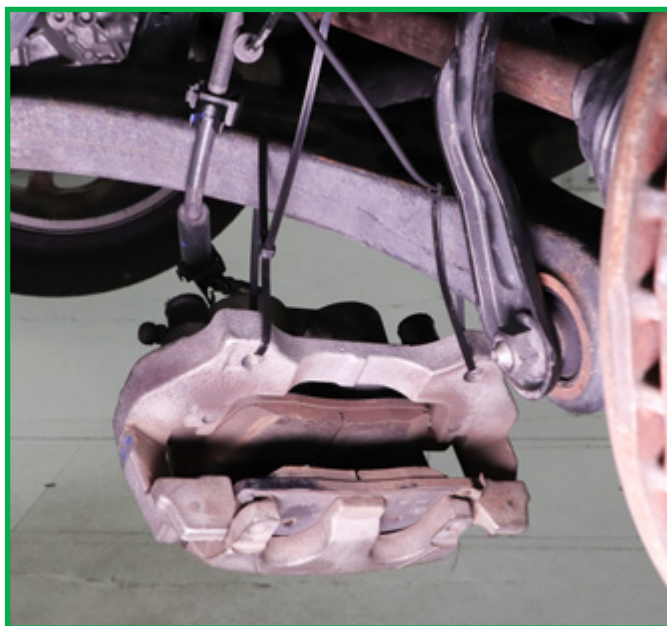


FIGURE 11

11. Disconnect sway bar end link from the shock absorber (not pictured) and separate. (Figures 12, 13)

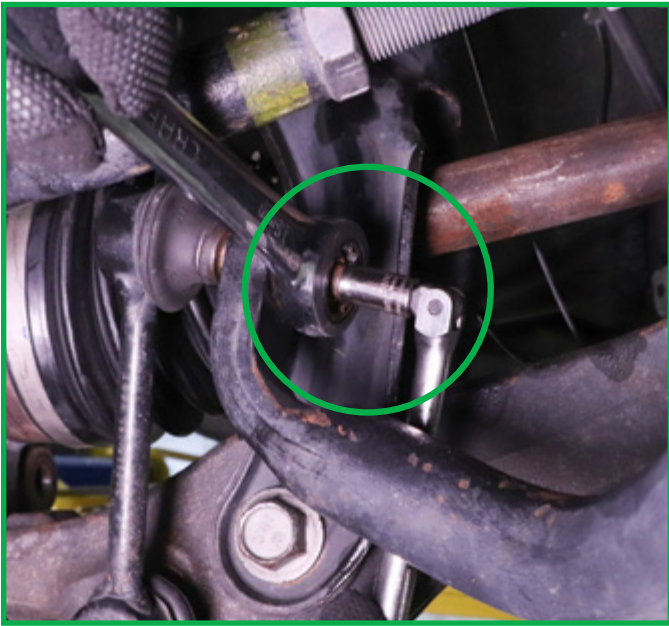


FIGURE 12

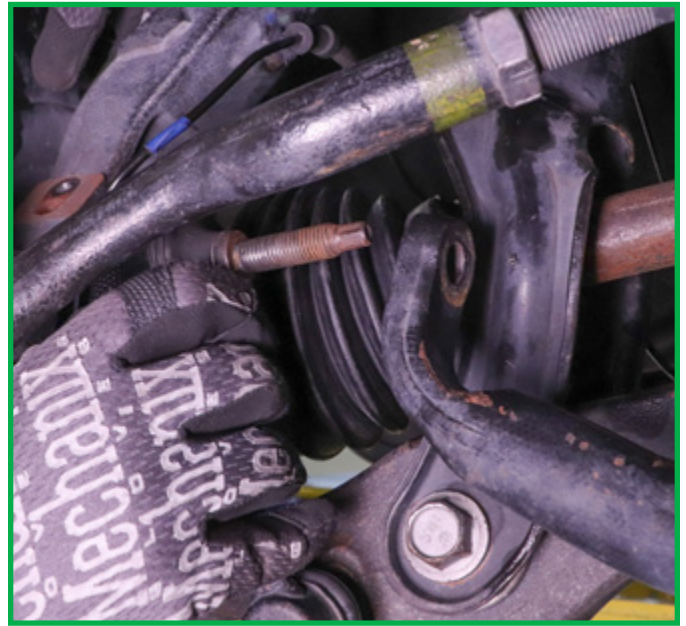


FIGURE 13

12. Disconnect tie rod and separate. (Figures 14, 15)

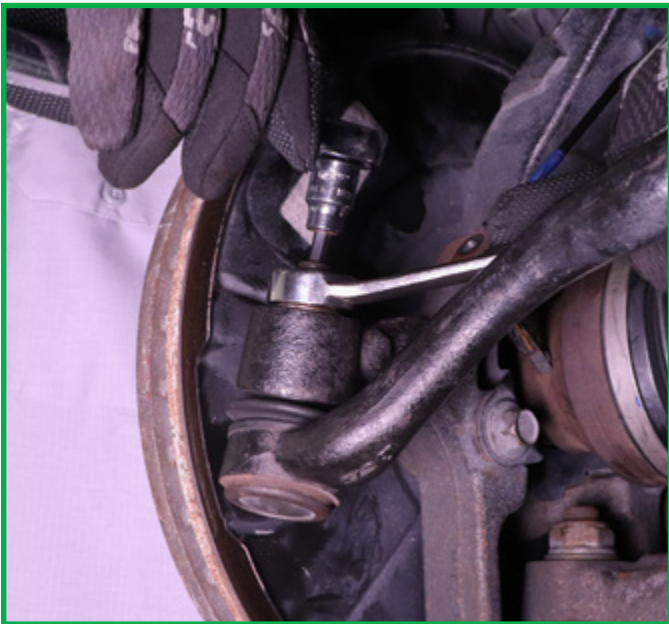


FIGURE 14



FIGURE 15

13. Disconnect top control arm nut and separate from spindle assembly. (Figures 16, 17)

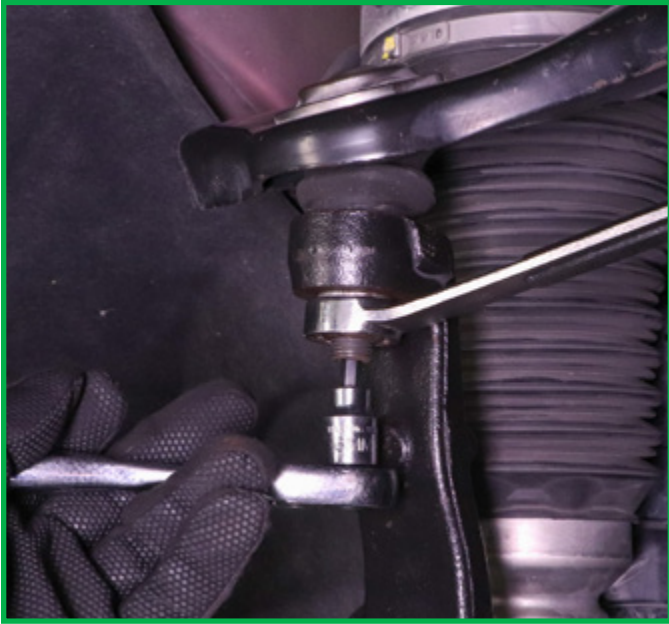


FIGURE 16



FIGURE 17

14. Remove bottom strut mounting nut and bolt. (Figures 18, 19, 20, 21)

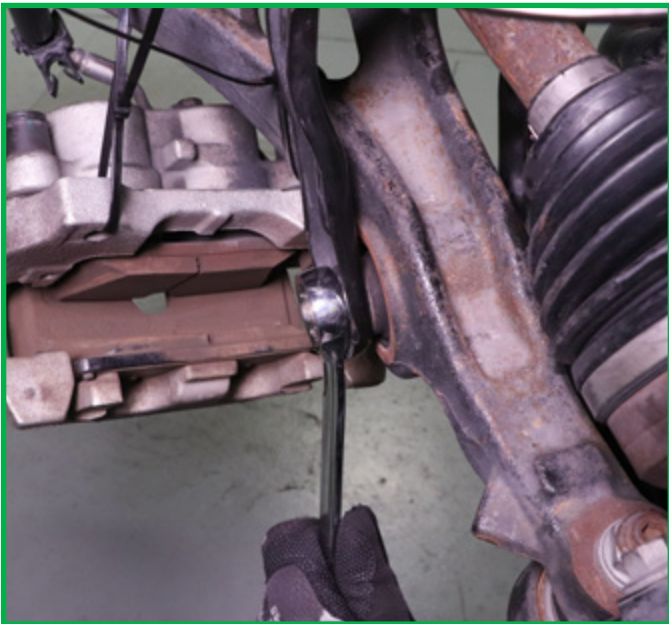


FIGURE 18



FIGURE 19

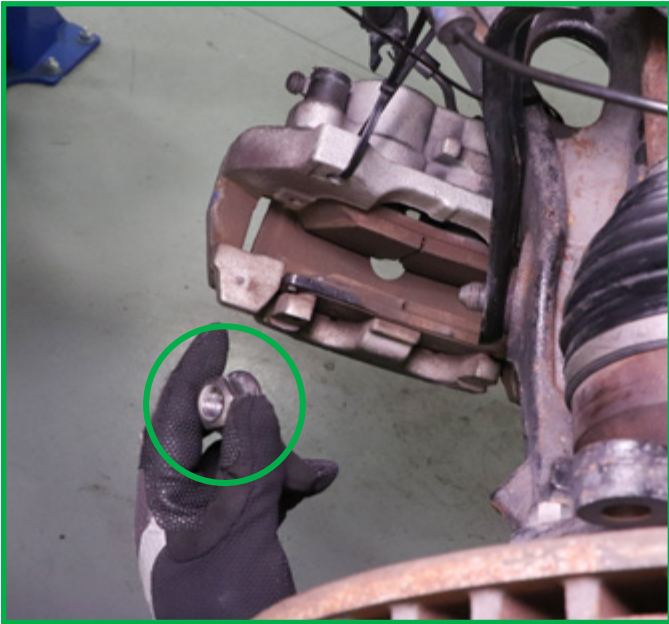


FIGURE 20

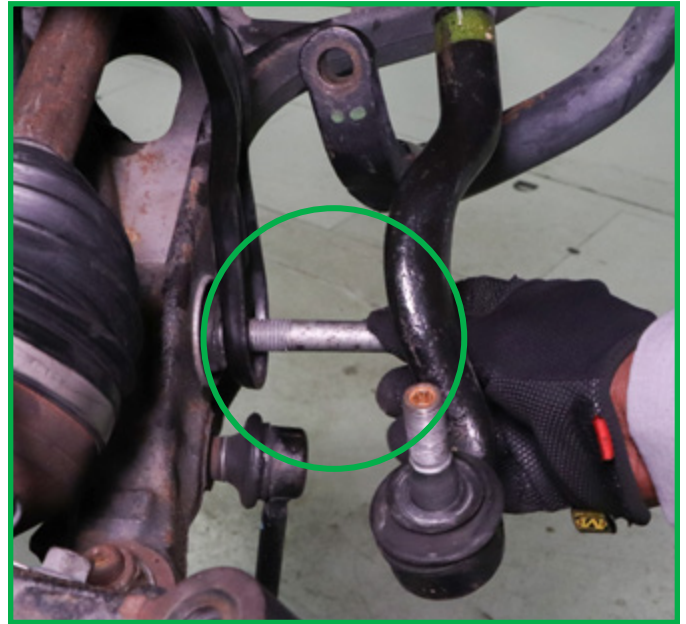


FIGURE 21

15. Remove air strut from vehicle. (Figure 22)

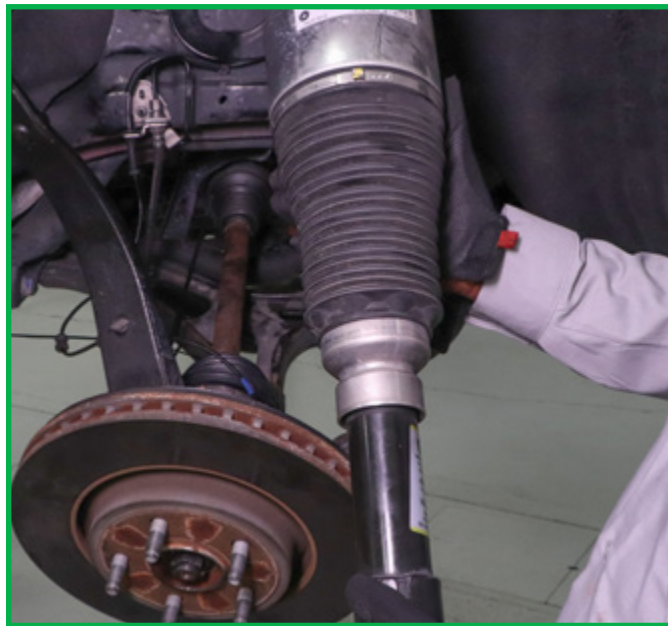


FIGURE 22

16. Removal complete.

AIR STRUT INSTALLATION



WARNING:

Tighten all nuts and bolts to manufacturer's specifications during the installation process.

1. Install the air fitting from the provided accessory kit on to the air strut and snug tight with a wrench. (Figures 23, 24)

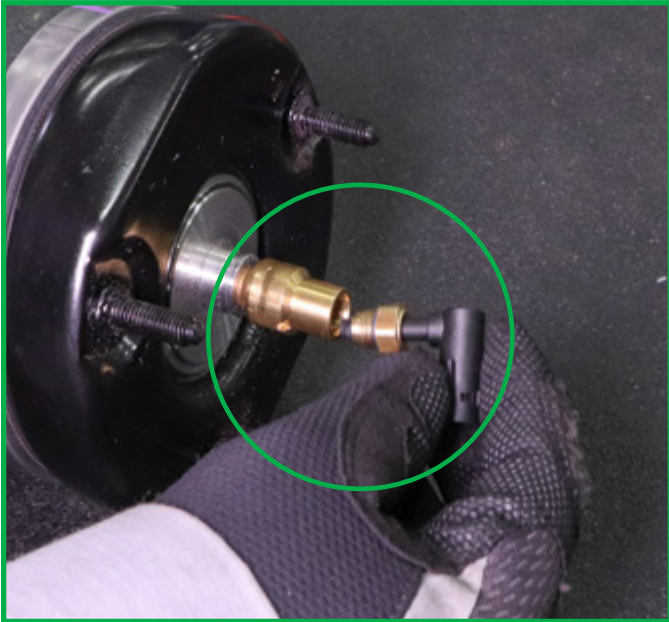


FIGURE 23

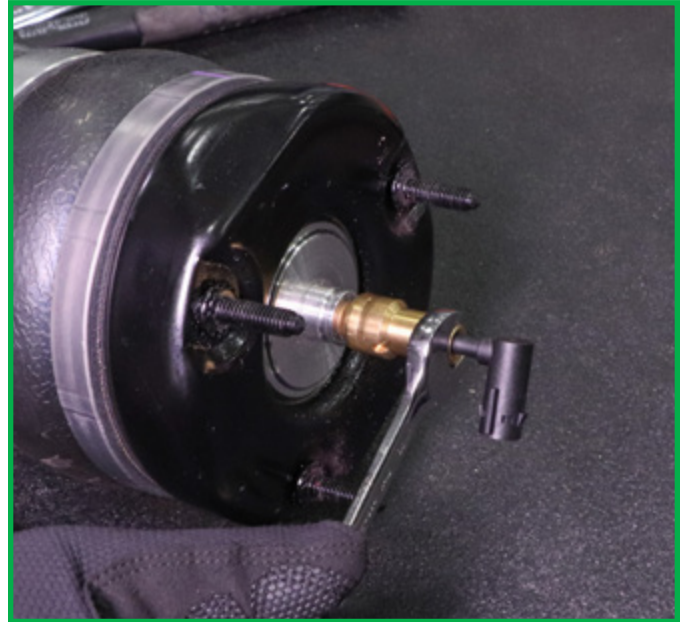


FIGURE 24

2. Install the new air strut into the vehicle. (Figure 25)



FIGURE 25

3. Reinstall bottom strut bolt. Use an appropriate jack to raise the wheel hub to normal trim height. Tighten bottom strut bolt to manufacturer's specifications. (Figures 26, 27, 28)



FIGURE 26

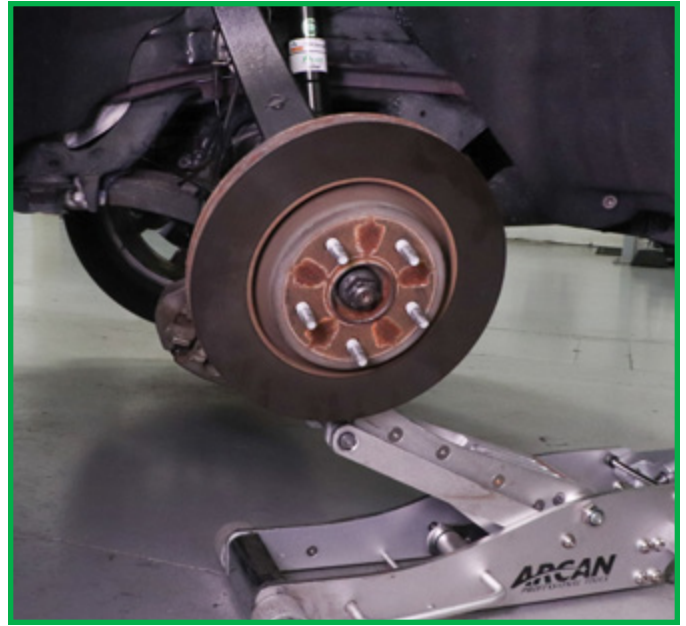


FIGURE 27



FIGURE 28

4. Reconnect the upper control arm to the spindle. Tighten to manufacturer's specifications. (Figure 29)



FIGURE 29

5. Reconnect the tie rod and tighten to manufacturer's specifications. (Figure 30)



FIGURE 30

6. Reconnect sway bar end link to the shock absorber (not pictured) and tighten to manufacturer's specifications. (Figures 31, 32)

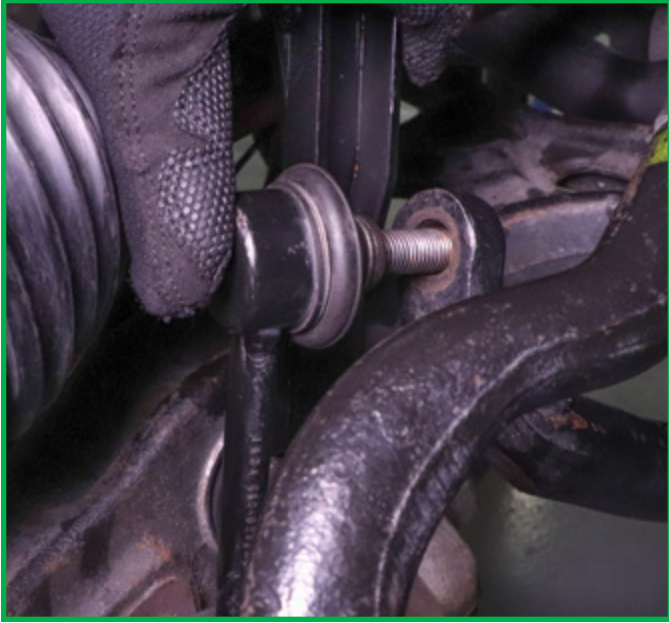


FIGURE 31

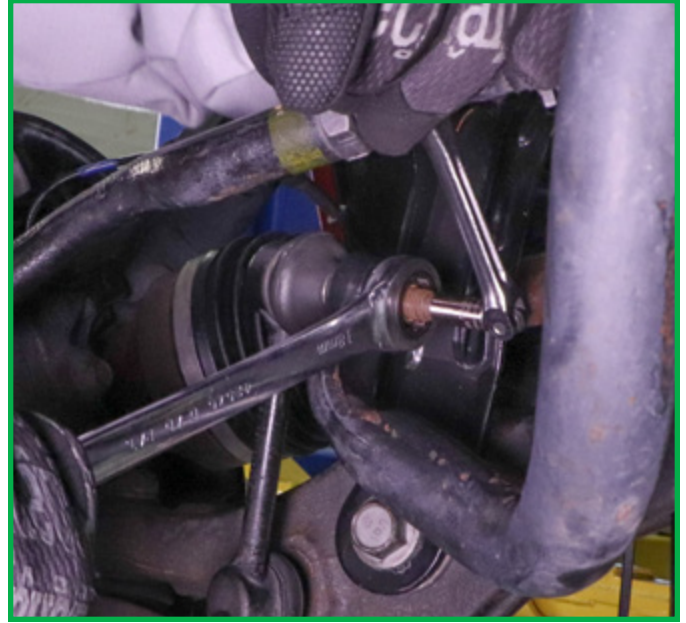


FIGURE 32

7. Reinstall the brake caliper and retaining clip. Tighten to manufacturer's specifications. (Figures 33, 34)

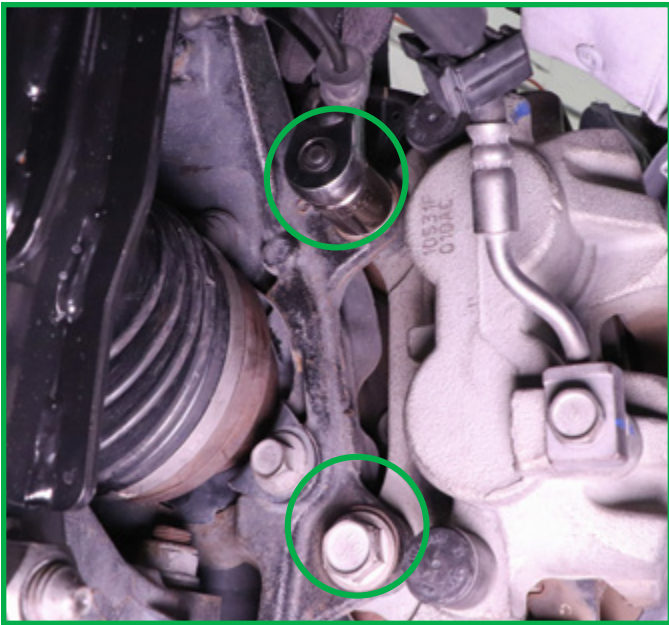


FIGURE 33

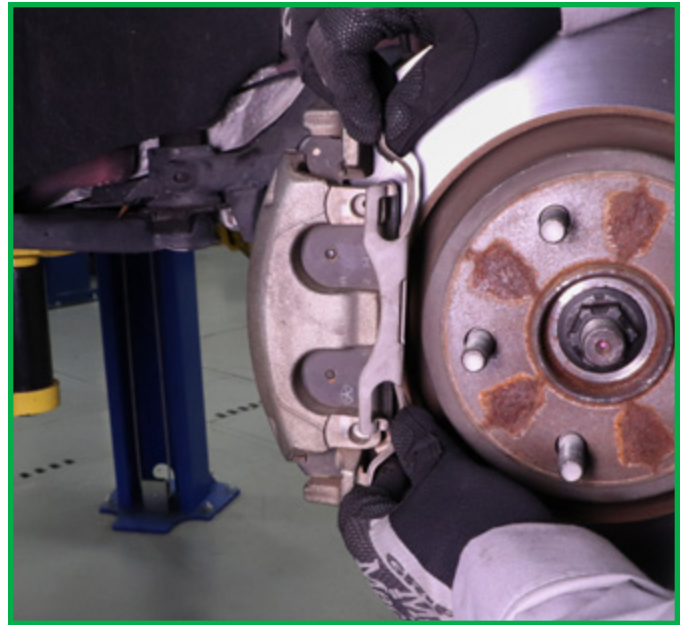


FIGURE 34

8. Reinstall speed sensor and tighten to manufacturer's specifications. Reroute the speed sensor wire along the brake line path, clipping them securely. (Figures 35, 36, 37)

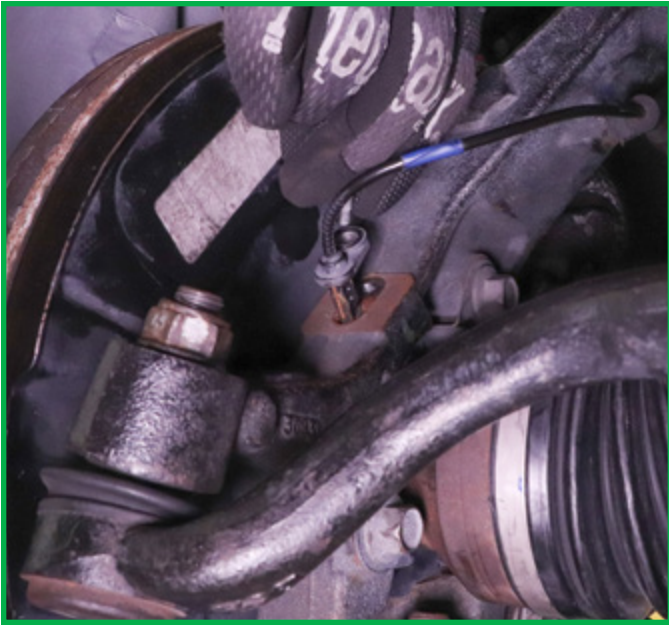


FIGURE 35

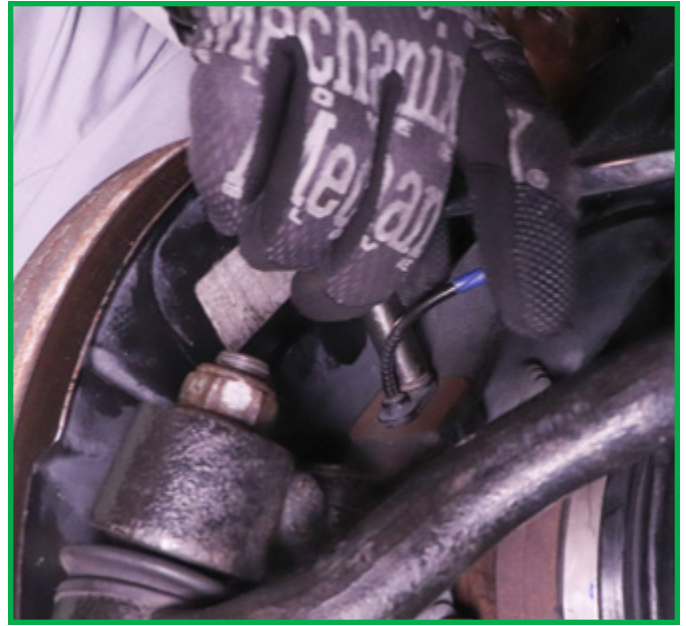


FIGURE 36

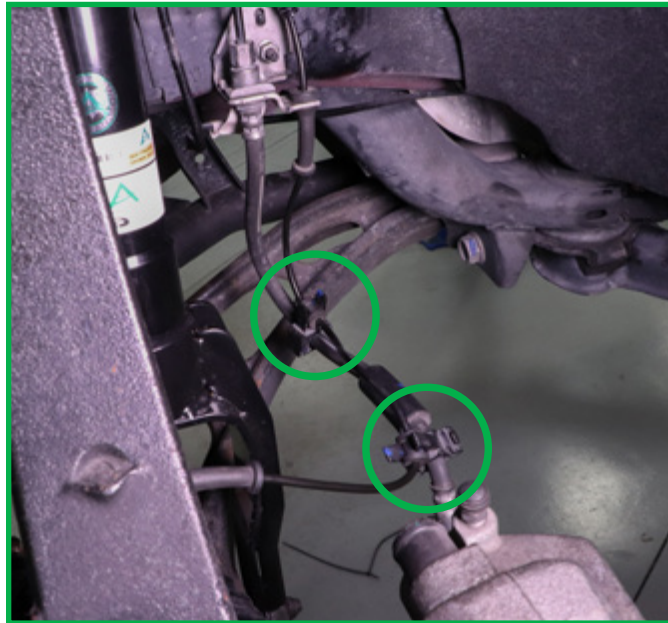


FIGURE 37

9. Reinstall the three (3) top mount nuts and tighten to manufacturer's specifications. (Figure 38)



FIGURE 38

10. Reconnect the air line to the air strut. (Figures 39, 40)

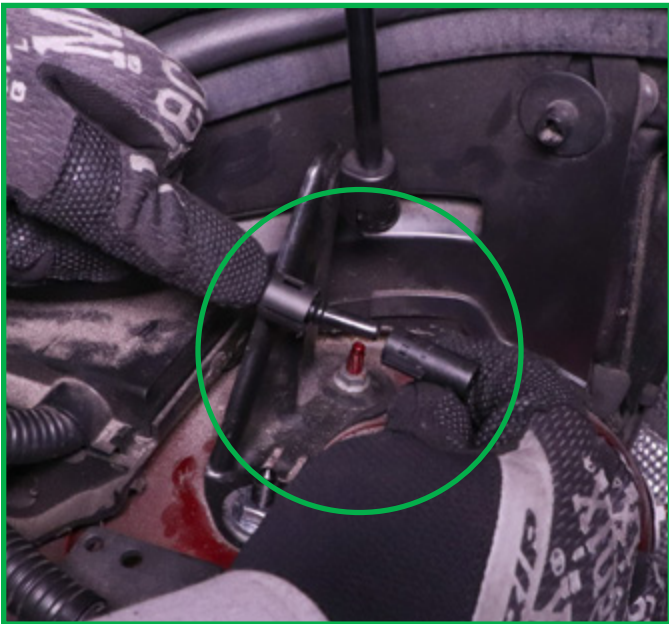


FIGURE 39



FIGURE 40

11. Reinstall the wheel.
12. Lower the vehicle.
13. Installation complete.

Arnott®

Suspension Products

Arnott US Business Office:

www.arnottinc.com

100 Sea Ray Drive
Merritt Island, FL 32953

Call: 800.251.8993

321.868.3016

Fax: 321.868.3703

Email: techassistance@arnottinc.com

Arnott Europe Business Office:

www.arnotteurope.com

Industrieweg 19
5145 PD, Waalwijk (NL)

NL Phone: +31 73 7850 580

DE Phone: +31 85 2087 438


UK Phone: +44 203 3186 124

BE Phone: +32 258 846 90


ES Phone: +34 91 901 10 56

FR Phone: +32 78 48 46 93


Email: info@arnotteurope.com

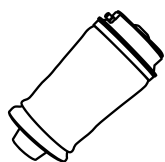


Air Springs

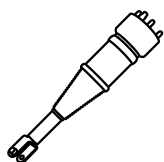


Struts

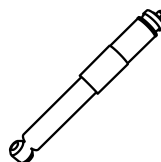


Shocks

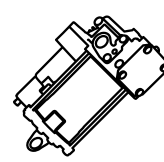


Compressors

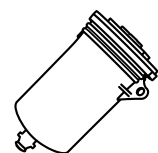


Dryers

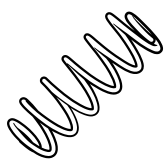

Coil Spring
Conversion Kits

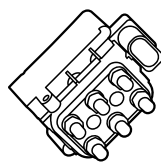

Valve Blocks

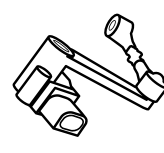

Ride Height
Sensors