



Installation note for brake light switch

Dismantling the switch:

1. Disconnect the plug from the brake light switch.
2. Remove the switch from the holder by turning it 45° to the left.



Before you install the new switch in the vehicle, you should consider a few things:

- ⇒ The brake pedal must be in the unloaded position during installation and must remain in this position.
- ⇒ Before installation, the switch may be damaged by pressure on the plunger. It is also not functional or electronically testable.

Installing the new switch:

1. Insert the new switch into the opening of the retaining plate.
Press and turn the switch approx. 45° to the right until you hear a click.
2. The switch is thus activated and can be checked electronically.
⇒ *Check that the inner nose of the switch is in good contact with the groove stop. This ensures that the switch is correctly mounted.*
3. Reconnect the switch and check that the plug is seated correctly.
4. Carry out a functional test of the lights by pressing the brake pedal.
⇒ *Make sure that after installation of the brake light switch, all error codes can be deleted.*



Brake light switch

AIC Art.No.: 56712, 56713, 56714

**OE-reference no.: 6Q0 945 511, 1K2 945 511,
1C0 945 511A**