 
 


AIC SERVICEINFO 47/2020

INSTALLATION INSTRUCTION Control unit, lights 59799





>> Switch off the engine and lock the vehicle for approx. 3 minutes. When the vehicle enters the idle mode, remove the defective control unit and install the new one directly.

2 Teach-in of two control units:

- **>>** Switch off the engine and lock the vehicle for approx. 3 minutes. When the vehicle enters the idle mode, remove the right defective control unit (passenger side).
-) Install the new control unit on the right headlight (passenger side).
- >> Start the vehicle and switch the light switch 3 times within 2 seconds between position "0" and "Parking Light". Finally, the switch must remain in the "0" position.



- >> Switch to "Parking Light". When the light lights up normally, the exchange was successful. If this is not the case, repeat step 1 to 3.
- Switch off the engine and lock the vehicle for three minutes. Then mount the left control unit (driver's side).



NOTICE

If a control unit for the headlight has to be replaced, it is essential to ensure that the vehicle is not in operation and has been locked for at least 3 minutes.