

MANN-FILTER

Product Information

No 75
07/02/2018

Installation of the urea filter U 630 x KIT

The design of the MANN-FILTER urea filter U 630 x KIT has been changed. Not only the appearance, but also the installation process for this urea filter are different now. In the current design, MANN-FILTER U 630 x KIT has no thread in the internal diameter. It's thus simply inserted, it's no longer necessary to screw it in.

The filter continues to meet the vehicle manufacturers' specifications and be used in the vehicles listed in our online catalogue (www.catalog.mann-filter.com).



Previous design

With thread on the internal diameter to screw in



Current design

Without thread in the internal diameter to insert simply

O-ring in the housing and the drain screw must also be changed




Installation

1. Before fitting, the O-rings should be lightly moistened with liquid urea, glycerin or Parker Super-O-Lube
2. Then insert the filter into the housing cover before screwing completely into the housing

Removal

1. Open the housing cover (open-end wrench: SW 32)
2. Unscrew cover
3. Take out the foam part and pull out the filter – if not necessary bare-handed an open-end wrench can be used (SW 19 or SW 21)

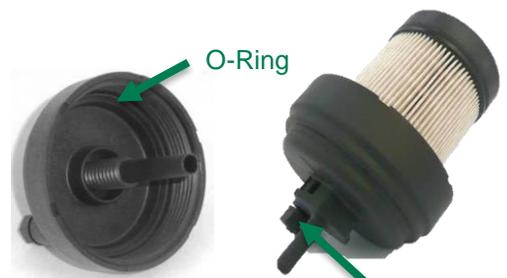

Ablausschraube



1.



2.



3.

