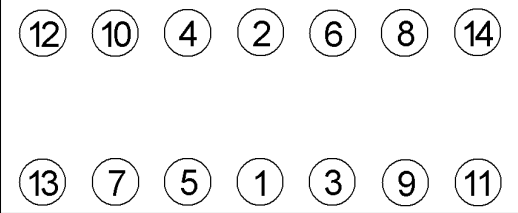


Anziehvorschrift für Zylinderkopf		058.053																										
Tightening Instructions for Cylinder Head																												
Instructions de serrage pour culasse																												
Prescripciones de apriete para culatas																												
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a																										
		BMW																										
234.640 M 12x1,5x217		Das Original																										
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete																												
																												
<table><tr><td>Anziehen/ Tightening/ Serrage/ Apriete</td><td>* □ ➤ ➤</td><td>80 Nm 50 Nm 90° 90°</td></tr></table>				Anziehen/ Tightening/ Serrage/ Apriete	* □ ➤ ➤	80 Nm 50 Nm 90° 90°																						
Anziehen/ Tightening/ Serrage/ Apriete	* □ ➤ ➤	80 Nm 50 Nm 90° 90°																										
Zeichenerklärung / Explanations / Explication / Explicacion																												
<table><tr><td>*</td><td>neue Zylinderkopf- schrauben verwenden</td><td>use new cylinder head bolts</td><td>utiliser des vis neuves</td><td>emplar tornillos nuevos</td></tr><tr><td>★</td><td>Warmlauf (80°C)</td><td>warm up time (80°C)</td><td>chauffage (80°C)</td><td>calentamiento (80°C)</td></tr><tr><td>□</td><td>Schrauben einzeln lösen und wieder anziehen</td><td>loosen and tighten each bolt</td><td>deserrer et serrer vis par vis</td><td>aflojar y apretar tornillo a tornillo</td></tr><tr><td>●</td><td>Setzzeit</td><td>relaxation time</td><td>durée de tassement</td><td>tiempo de espera</td></tr><tr><td>➤</td><td>Drehwinkel</td><td>torque angle</td><td>angle de serrage</td><td>ángulo de giro</td></tr></table>				*	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
*	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos																								
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)																								
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo																								
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera																								
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro																								
Motortyp / Engine type / Type de moteur / Tipo de motor																												
✚ 1,47 mm 1 Loch, Hole, Trou, Agujero, Fori																												
Mot. M57N2 D30 02/2006➔																												
3,0 ltr																												
E90/E91/E92/E93 325d, 330d,xd, 335d																												
E60/E61 525d,xd, 530d,xd 535d																												
E63/E64 635d																												
E65/E66 730d,Ld																												
E83 X3 3.0d,sd																												
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*058.053*																										