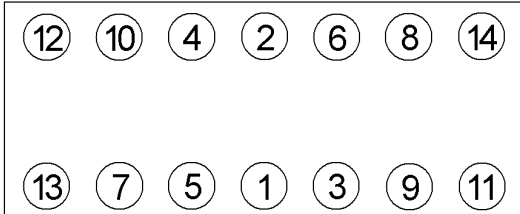


Anziehvorschrift für Zylinderkopf		058.193	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		BMW		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 234.640 M 12x1,5x217				
Anziehen/ Tightening/ Serrage/ Apriete	* ☐ ➤ ➤	80 Nm 50 Nm 90° 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Mot. M57N2 D30 02/2006➔				
E90/E91/E92/E93 325d, 330d,xd, 335d				
E60/E61 525d,xd, 530d,xd 535d				
E63/E64 635d E65/E66 730d,Ld				
E83 X3 3.0d,sd				
E70 X5 3.0d,sd				
E71 X6 30dX, 35dX				
✱ 1,67 mm 3 Löcher, Holes, Trous, Agujeros, Fori				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*058.193*	