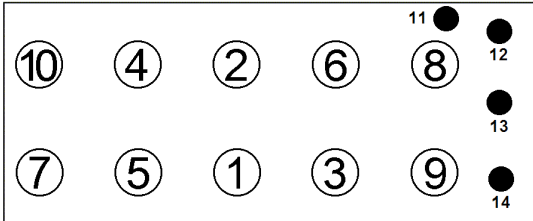


Anziehvorschrift für Zylinderkopf		240.170		 Das Original			
Tightening Instructions for Cylinder Head		passend für / suitable for					
Instructions de serrage pour culasse		adaptable à / adaptable a					
Prescripciones de apriete para culatas		Audi / Bentley					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete					
 233.930 M 10x1,5x134							
Anziehen/ Tightening/ Serrage/ Apriete		* M10 30 Nm 60 Nm ➤ 90° ➤ 90°		M6 10 Nm ➤ 90°			
Zeichenerklärung / Explanations / Explication / Explicacion							
* neue Zylinderkopf-schrauben verwenden		use new cylinder head bolts		utiliser des vis neuves		emplar tornillos nuevos	
★ Warmlauf (80°C)		warm up time (80°C)		chauffage (80°C)		calentamiento (80°C)	
□ Schrauben einzeln lösen und wieder anziehen		loosen and tighten each bolt		deserrer et serrer vis par vis		aflojar y apretar tornillo a tornillo	
● Setzzeit		relaxation time		durée de tassement		tiempo de espera	
➤ Drehwinkel		torque angle		angle de serrage		ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor							
V8, TFSI, links/left							
Mot. CEUC, CEUA, CGTA, CTFA, CRDB CMMC, CMMD, CYCA, CYCB							
S6, RS6, S7, RS7, A8, S8 New Continetal, Flying Spur							
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601				*240.170*			