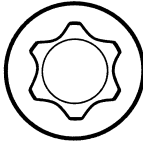
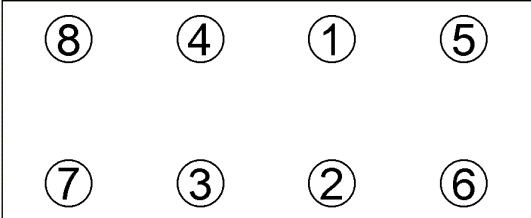


Anziehvorschrift für Zylinderkopf		497.420	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Mercedes-Benz		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
258.920 M 11x1,5x170				
Anziehen/ Tightening/ Serrage/ Apriete	* M 11 20 Nm 40 Nm ➤ 90° ➤ 90°	M 8 15 Nm ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø 93,5, $\frac{1}{2}$ 0,65 mm				
Mot: M 272.960,963,964,967,970,972,975 979,985 Mot. 30089233➔				
C350,CLK350,SLK350,E350,CLS350,ML350,R350 links/left/gauche/izquierda/sinistra				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*497.420*	