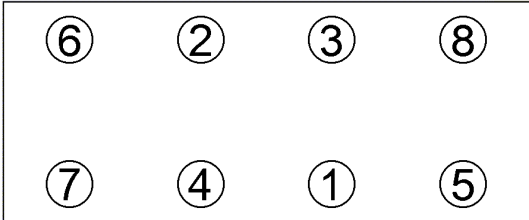


Anziehvorschrift für Zylinderkopf		796.160 passend für / suitable for adaptable à / adaptable a VW / AUDI	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 223.890 M 10x1,5x170				
Anziehen/ Tightening/ Serrage/ Apriete		* 40 Nm ➤ 90° ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✳	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor 2,8 V6 FSI / 3,0l V6 TFSI Cyl. 1-3 2014➔ Mot: CREB, CREC, CREH, CREG, CTDA CVPA A6, A7, A8, Phideon				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*796.160*	