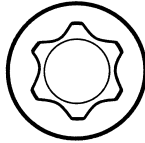
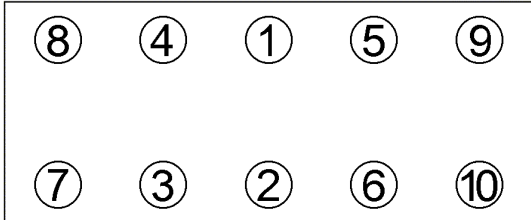


Anziehvorschrift für Zylinderkopf		724.510		
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Citroen, Peugeot, Fiat Lancia		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
Anziehen/ Tightening/ Serrage/ Apriete		* □ ➤	15 Nm 50 Nm 20 Nm 285° ± 5°	
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 85,5 mm; ½: 1,40 mm				
Mot: EW10J4, EW40J4S, EW10D, DEW10J4, RFK, RFN, RFR, RLZ 2,0 Ltr. 99-130 kW (135-177 PS)				
C4, C5, C8, Evasion, Jumpy, Xsara, Scudo, Ulysse, Phedra, Zeta, 206, 307, 406, 407, 607, 806, 807				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*724.510*	