
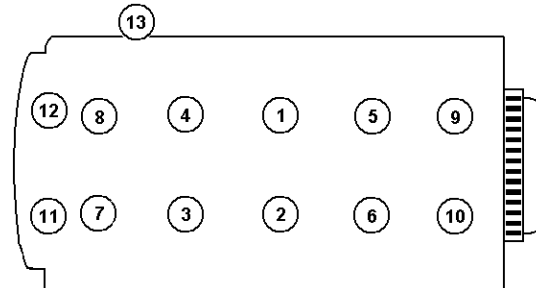


Anziehvorschrift für Zylinderkopf	729.050	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Peugeot

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



Anziehen/ Tightening/ Serrage/ Apriete	*	Mot EP3 / Pos 1-10 30 Nm ➤ 90° ➤ 90°	*	Mot EP6 / Pos 1-10 30 Nm ➤ 90° ➤ 90°
		Pos. 11-12: 25 Nm ➤ 90° ➤ 90°		Pos. 11-12: 30 Nm ➤ 90° ➤ 90°
		Pos. 13: 30 Nm		Pos. 13: 9 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 78 mm; \pm : 0,90 mm

PSA Mot. EP3, EP6 / Mini Mot. N12 B14/B16

1,4-1,6 ltr., 55-90 kW (75-122 PS)

PSA 207, 207 CC, 308, 3008, 5008, C4

Mini R55/R56/R57/R58/R60 Cooper, One 1.4i

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

729.050