


Anziehvorschrift für Zylinderkopf		893.617 passend für / suitable for adaptable à / adaptable a BMW	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo



802.810
M 11 x 140

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

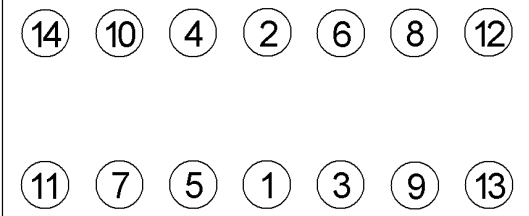

Anziehen/ Tightening/ Serrage/ Apriete	> 1988	1989 >
* 50 - 60 Nm	* 50 - 60 Nm	
● 15 min	● 15 min	
➤ 75°	➤ 90°	
★ 25 min	★ 25 min	
➤ 85° - 95°	➤ 90°	

Zeichenerklärung / Explanations / Explication / Explicacion

* neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★ Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐ Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
● Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤ Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

 Mot. M21 D24

 E30 324d, td → 12/1988
 E28 524d, td
 E34 524td

 80 Ø, 1,55 mm,
 1 Loch, Hole, Trou, Agujero

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*893.617*
--	------------------