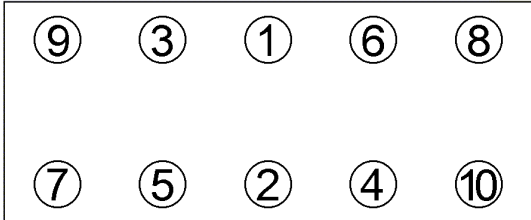


Anziehvorschrift für Zylinderkopf		902.620 passend für / suitable for adaptable à / adaptable a Ford/Changan	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 087.830 M 10x1,5x143			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤	5 Nm 15 Nm 35 Nm 75°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Ø 79,8 mm; $\frac{1}{8}$: 0,32 mm Mot: HXJA; RHBA; PNBA 1,6 ltr. Duratec TI-VCT 110;115;120;123 PS Ford 1.6L 16V C6 Fiesta CB1 → 07/2008; Focus C-Max CB3 → 03/2007 Focus CB4 → 12/2007; Mondeo CA2 → 02.2007			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*902.620*	