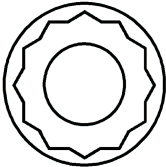
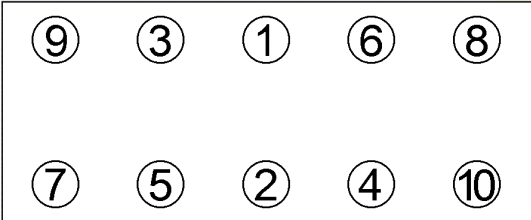


Anziehvorschrift für Zylinderkopf		920.355		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
passend für / suitable for adaptable à / adaptable a		Toyota	Das Original	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo				
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
708.210 M 10 x 90/108				
Anziehen/ * 29 Nm Tightening/ ➤ 90° Serrage/ ➤ 90° Apriete				
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
82,0 mm Ø				
Corolla AE 92 Mot.4 AGEL 1987>7/1989				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*920.355*		