


Montageanleitung | Installation Instruction | Notice de montage
Istruzioni di montaggio | Instrucciones de montaje
Instruções de montagem | Installationsanvisning | Montagehandleiding

de Innenraumfilter
en Cabin filter
fr Filtre d'habitacle
it Filtro abitacolo
es Filtro ventilacion para interior
pt Filtro de purificação do habitáculo
sv Kupéfilter
nl Interieurfilter

6000119707






BOSCH



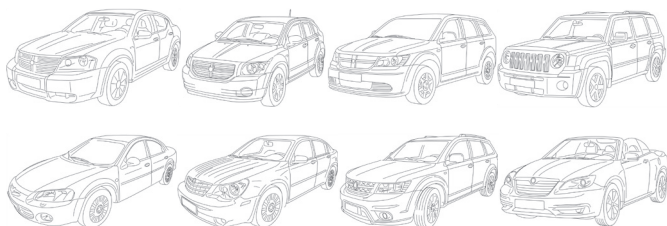


1 987 435 595

Dodge Avenger [JS]	06.07 -> 12.14
Dodge Caliber [PM]	06.06 -> 08.12
Dodge Journey [JC]	06.08 -> 08.12
Jeep Patriot [MK]	10.06 -> 12.18
Chrysler Sebring [JS]	09.06 ->
Chrysler Sebring [JR]	09.00 -> 09.09
Fiat Freemont [345]	08.11 -> 12.15
Lancia Flavia Cabriolet	03.12 -> 12.13

10 min.

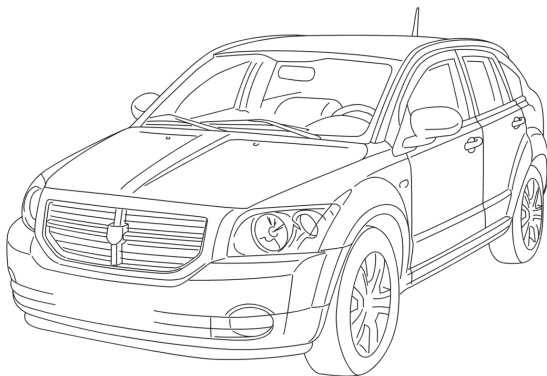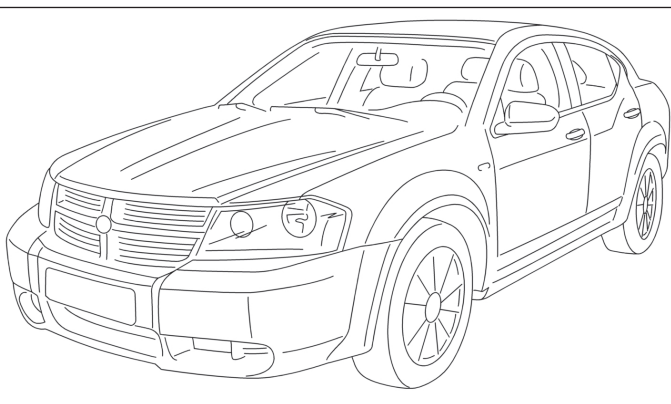

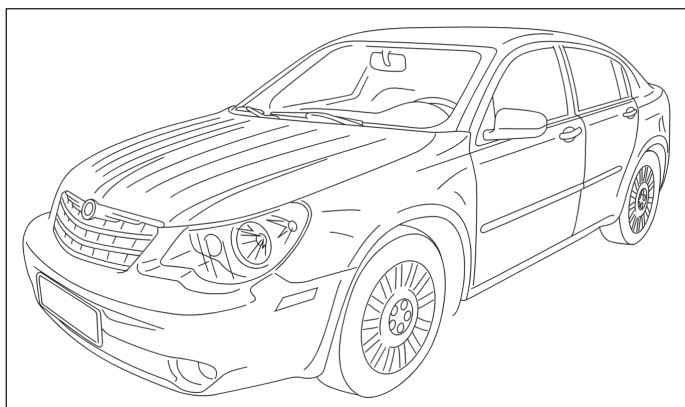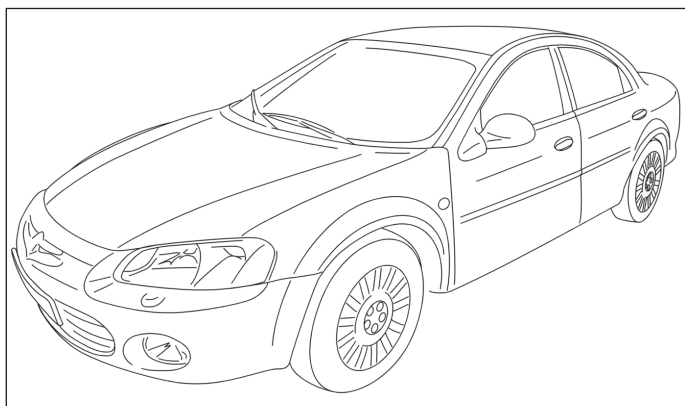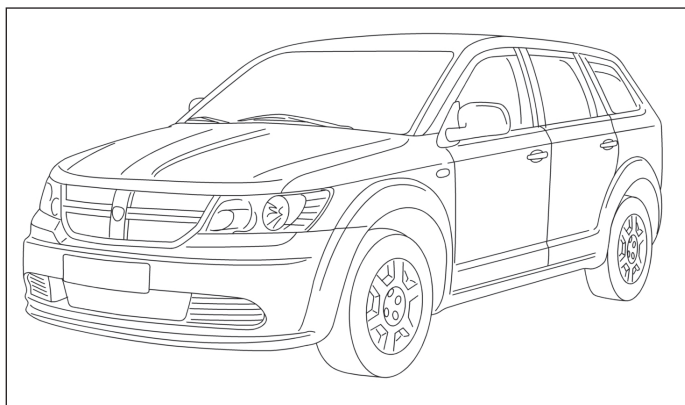

10 min.

