

## Service information

## Length of shock absorbers Mercedes Benz Sprinter, Volkswagen LT



Item no.: 115 904, 115 905, 115 906, 115 907



Fig. 1: Front axle

Length (1) in mm	Part number*
388	115 904
	115 905 HD
355	115 906
	115 907 HD

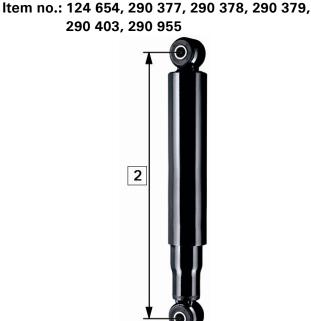


Fig. 2: Rear axle

Length (2) in mm		Part number*
Extended	Compressed	
515	325	124 654
		290 955 HD
524	324	290 377
		290 378 HD
		290 403 HD
549	349	290 379

Table 1: Assignment of the measured length of the shock absorber (1) or (2) in mm to the part numbers HD: heavy duty

\* You can find information and data on the assignment of the shock absorbers to the vehicle in our latest catalogs.

## **WARNING**

If the wrong shock absorbers are installed, they may not function properly or fail completely. This will cause unstable driving characteristics and the driver can easily lose control of the vehicle. Always install shock absorbers which meet the specifications of the vehicle manufacturer.



Vehicles in these series have shock absorbers of different lengths. The shock absorbers are marked with the spare part number. If this number is no longer legible, the shock absorber can still be identified. To do this, measure the length of the shock absorber (Fig. 1, Fig. 2).



www.zf.com

www.zf.com/serviceinformation